



User & Cleaning Guidelines

High Speed Oven Basket

1. Best practice is to clean the basket **after every cooking cycle** with a damp cloth or kitchen paper.
2. In case **fatty food** is cooked inside the basket the operators need to be aware fat can carbonize and self-ignite under repeated influence of high heat and microwaves. In this case cleaning of the basket **after a cooking cycle is highly recommended** to avoid the risk of self-ignition. You otherwise can get holes in your basket
3. The baskets should **not** be placed in a **dishwasher** to enhance the longest life time of the baskets it's advised to clean them with mild detergent and a damp cloth. Rinse with water after cleaning and dry off completely. Cleaning in a dishwasher changes the structure of the material.
4. **Do not** use brushes or scrapers in order to not damage the coating.
5. **Avoid contact with** sharp objects and direct heating elements. Do not let the basket stay in the oven while not cooking a product in it.
6. **Please remember a basket is an accessory that needs to be replaced every 3-4 months, depending on how you tread it.**

